



UV02

€ 890,00*

High Speed UV Curing Machine

1~5 min

Curing time was reduced to 5 minutes or less
The higher light power, the shorter
curing time.

All-round curing


UV lamps are equipped on a six sides
chamber, furthermore, mirror surfaces
are applied on top and bottom to reflect
UV light to achieve fast, uniform and fully post curing.

365/385/405 nm

Available for post-curing of various resins at the same time



Nine Key Technologies Upgrade Configuration




To save curing time
Generally 1-5 minutes
for the process



Adjustable light intensity
to meet different
curing needs



8 groups of data
Presets and customizable
cure settings




Three-wavelength UV
light work freely and
independently




All-round curing
More uniform curing,
less warping




One-way mirror design
Visible window
+ specular reflection



Countdown Tips
Adjustable from
0-30 minutes



Power dial
Meet different voltage
requirements



Simple operation
Friendly interface

Cutting-edge Efficiency Cured in Three Minutes


Save curing time, usually completed in 1-3 minutes

Multi-band independent control can improve

the degree of post-curing.





UV02 Recommended Curing Parameters

PN-model	385、405nm	100%	2(1-5)min
PN-model2.0	385、405nm	80%	2(1-5)min
PN-RD	385、405nm	100%	3(2-8)min
PN-SG	385、405nm	80%	3(1-8)min
PN-CAST	385、405nm	100%	3(1-8)min
PN-WM	385、405nm	100%	3(1-5)min
PN-GM	385、405nm	100%	10s(5-30)s
PN-TEMP	385、405nm	100%	10(5-15)min
PN-Try-in	385、405nm	100%	10(5-15)min
PN-Denture	385、405nm	100%	15(10-20)min

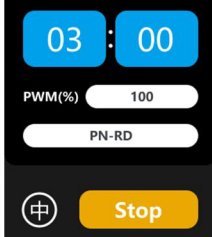

8 Groups of Data Presets and Customizable Cure Settings

Select the parameter package you need, and you can
customize the settings to modify the default parameters.

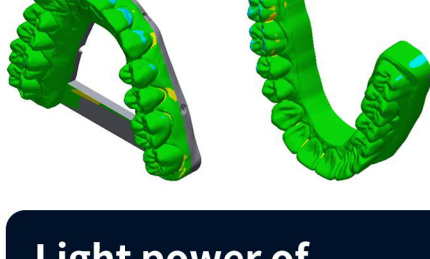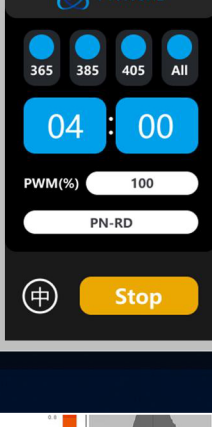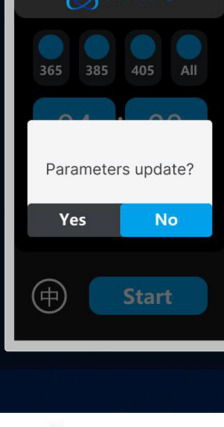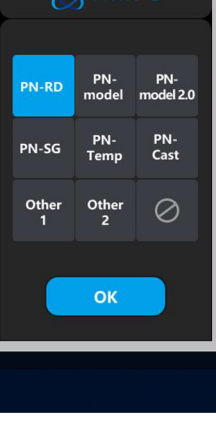

Light power of panel is adjustable

To meet different requirement of light power,
faster and better curing

75%

Reduction rate of Removable
Die Model resin is as high as

97.7%

Removable Die Model resin
Curing time as low as

2min

UV02 Parameters

High Power UV Curing Machine

G.W.	14KG
N.W.	11KG
Cured Size	(D×H) 180×120mm
Machine Size	366×300×250mm
Package Size	464×386×334mm
Way to Control	Touch Control, LED Display
Rated Power	360W
Rated Voltage	AC 110/220V
Optional Curing Time	0-30min
UV Lamp Wavelength	365nm/385nm/405nm
Single-side UV Lamp Power	40W

*Prezzo esclusa IVA